

**STEP1**  
Choose the design

Use the accompanying software to choose the design. Set the printing mode based on the fabric used.



**STEP2**  
Set fabric

Set the T-shirt or bag in the tray. Even beginners can accomplish this task with ease.



**STEP3**  
Pre-press

Insert the tray into the finisher to smooth out creases.



**STEP4**  
Print

Printing takes approximately two minutes. Just load and unload the tray - it is that easy.



**STEP5**  
Fix the design

Use the finisher (with builtin safety features) to fix the ink and lock in the design.

